

Switches in the handles are easily removed and replaced by simply unplugging them.



To replace a switch, grasp the handle with both hands and using your thumbs, roll down the rubber padding as shown in this photo.

Remove the switch by unscrewing the switch from the grey housing from the bottom. Once the switch is free from the housing, unplug the wires from the switch and replace with new switch.

Reset switch in housing and place back in the handle.

